

Panel Slip Cover Procedure


The Strukturoc wall panels can be replaced without removing the entire wall. One panel or more can easily be replaced when simply following these steps below.

Recommended Tools:

- 1) Cotton work gloves or clean gloves.
- 2) Safety Glasses.
- 3) Tape Measure.
- 4) Rivet Gun.
- 5) 1/16" drill bit.
- 6) Screw Gun.

Panel Slip Cover Procedure

The Strukturoc wall panels can be replaced without removing the entire wall. One panel or more can easily be replaced when simply following these steps below.

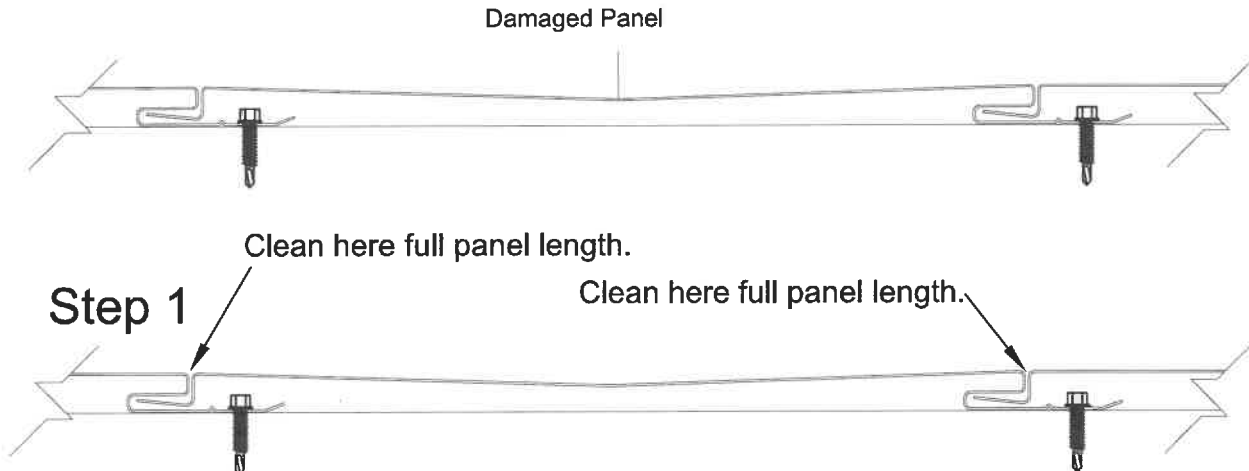


Using a brush or an air gun remove as much of the overspray from the 2 vertical edges (Bottom to top). Be Sure to protect the surface of the adjacent panels when cleaning out the overspray.




The panel cover should be installed with the $\frac{3}{8}$ " end to the left side of the panel.

Step 2

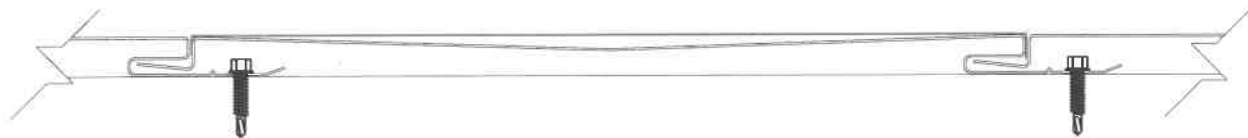

Install the panel cover by inserting the right edge first and then using some pressure to secure the left edge of the panel cover down into the panel joint.

Step 3

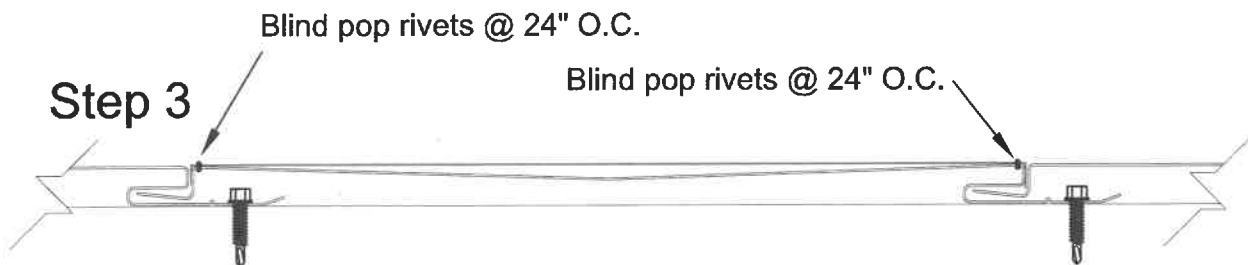

Use the supplied blind pop rivets to secure the panel cover to the damaged panels face. Attach the blind pop rivets to each side of the panel at 24" O.C. Use the supplied textured touch-up paint to cover the blind pop rivets.